

INFINITY

Quick Set-Up

Congratulations on your Halcyon BC purchase. This quick set-up guide will introduce you to your new Infinity BC System or Doubles with Cinch Quick-adjust harness (see reverse side). Please review the Halcyon BC, Owner's Manual for detailed instructions.

INFINITY BC COMES WITH THE FOLLOWING:

- Cinch Plate
- Installed ACB Weight Pockets
- Deluxe Padding
- Single Tank Adapter

GETTING TO KNOW YOUR INFINITY BC SYSTEM

- The Cinch Quick-adjust enables you to quickly adjust harness size with a simple push or pull.
- The Deluxe backplate pad features a Storage Pak for lift devices. For more information on using the storage pack, see p. 17 of the BC Manual.
- Adjustable shoulder pads allow easy installation and precise adjustment of chest D-rings.
- Adjustable D-ring assembly replaces ACB and allows easy harness adjustments.
- Light Retainer Assembly securely holds light, allowing harness adjustment and removal/replacement of hip mounted primary light.



TIGHTEN: Pull the harness waist strap up and out



LOOSEN: Push the harness shoulders up and forward

Sizing your Harness (see P. 7 of the BC Manual for complete instructions)

- Size the harness and adjust the position of your shoulder D-rings.
- Adjust the Velcro tabs to prevent interference with your shoulder D-rings. When moving the tabs, fold the soft part of the Velcro and slide it through the slots in the shoulder pad.
- Position the waist buckle and trim any leftover webbing, leaving a bit of extra length for any future adjustments.

Removal/replacement of Cinch components

Bolts holding the ACB and Light retainer assemblies also attach the Cinch Plate to the backplate. Be sure to attach the desired accessory as well as the Cinch plate when making any changes.

Removal of ACB pockets

Weight pockets are secured by accessory tabs which also hold the Cinch plate to your backplate. If you are removing a right pocket to install the light fixture please note the appropriate section below. In this case you will remove the weight pocket accessory and install the light fixture using the longer bolt. To remove the left pocket, detach the belt buckle and remove the left weight pocket accessory tab. If you are installing a D-ring assembly you can secure the Cinch with a short bolt. The weight pocket and light fixture require a long bolt.

Installing the Left D-ring (Purchased Separately)

Left Side (as worn on the diver): The D-Ring assembly is secured to the Cinch plate with a triglide. You will need to re-attach the Cinch plate to the backplate with one of the short bolts in the Bolt Kit. Save the long bolt in your kit.

Installing the Light Retainer Assembly (Purchased Separately)

Right Side (as worn on the diver): The Light Retainer assembly will bolt to the Cinch and backplate. After removing the Right ACB pocket, keep the long bolt out for use. Attach the Light Assembly and Cinch to the plate and continue with installation.

Adjusting the Quick-adjust Crotch Strap

The Adjusting your crotch strap can be accomplished rapidly by moving the quick adjust buckle in the desired direction. Please see the following for adjusting the position of the buckle.

Position the crotch strap as desired by moving the Quick-adjust buckle.

Position the Quick-adjust buckle & D-ring approximately the width of your hand away from the backplate.

Remove the webbing tail from the tri-glide and D-ring.

Move the Quick-adjust buckle toward the backplate to the desired position, creating a bit of excess webbing.

Feed the excess webbing through the backplate slot and the D-ring tri-glide (this will increase the "tail" to be removed). Be sure the Quick-adjust buckle is still in the correct place.

Reposition the tri-glide/D-ring, cutting any excess webbing at the tail end. Be sure your webbing runs through the Quick-adjust buckle and feed the tail back through the tri-blide (so the end of the webbing is now facing up toward the backplate again).

You can now adjust position of the buckle and tri-glide as needed.

